

*SD Card, real time data recorder, Patented
+TYPE K/J Thermometer*

UVA LIGHT METER

Model : UVA-365SD

ISO-9001, CE, IEC1010



LUTRON ELECTRONIC

The Art of Measurement

SD Card real time data recorder

+ type K/J thermometer

UVA LIGHT METER

Model : UVA-365SD

FEATURES

* Professional UVA light meter.
* Long wave 365 nm ultra-violet irradiance measurement. Professional UVA light meter, used to measure the UVA irradiation value under the UVA light (black light) source.
* Two ranges : 2 mW/cm ² , 20 mW/cm ² .
* Exclusive UVA sensor structure with metallic housing case.
* UVA LSensor with cosine correction filter.
* It build the Zero button.
* Application for the UVA light measurement : Monitoring blue light radiation hazards in welding, UV sterilization , Graphic arts, Photochemical matching, UV EPROM erasure, Photoresist exposure, Curing of inks, adhesives and coatings.
* Microprocessor circuit provides high reliability and durability.
* Separate UVA LIGHT probe allows user to measure the UVA light at an optimum position.
* Type K, Type J thermocouple thermometer.
* Real time SD memory card Datalogger, it Built-in Clock and Calendar, real time data recorder , sampling time set from 1 second to 3600 seconds.
* Manual datalogger is available (set the sampling time to 0), during execute the manual datalogger function, it can set the different position (location) No. (position 1 to position 99).
* Innovation and easy operation, computer is not need to setup extra software, after execute datalogger, just take away the SD card from the meter and plug in the SD card into the computer, it can down load the all the measured value with the time information (year/month/date/ hour/minute/second) to the Excel directly, then user can make the further data or graphic analysis by themselves.
* SD card capacity : 1 GB to 16 GB.
* LCD with green light backlight, easy reading.
* Can default auto power off or manual power off.
* Data hold, record max. and min. reading.
* Microcomputer circuit, high accuracy.
* Power by UM3/AA (1.5 V) x 6 batteries or DC 9V adapter (optional).
* RS232/USB PC computer interface.

GENERAL SPECIFICATIONS

Circuit	Custom one-chip of microprocessor LSI circuit.
Display	LCD size : 52 mm x 38 mm LCD with green backlight (ON/OFF).
Measurement	UVA Light . Type K/J thermometer .
UV Sensor spectrum	260 nm to 390 nm. * Refer to the following attached spectrum diagram.
UVA 'sensor structure	The exclusive UVA photo sensor with the cosine correction filter.
UVA light zero adjustment	By push button.
Memory with Recall	Records Maximum & Minimum reading with recall.
Datalogger	Auto 1 second to 3600 seconds @ Sampling time can set to 1 second, but memory data may loss.
Sampling Time Setting range	Manual Push the data logger button once will save data one time. @ Set the sampling time to 0 second. @ Manual mode, can also select the 1 to 99 position (Location) no.
Memory Card	SD memory card. 1 GB to 16 GB.
Advanced setting	* Set clock time (Year/Month/Date, Hour/Minute/ Second) * Decimal point of SD card setting * Auto power OFF management * Set beep Sound ON/OFF * Set thermometer type to Type K or Type J * Set temperature unit to °C or °F * Set sampling time * SD memory card Format
Temperature Compensation	Automatic temp. compensation for the type K/J thermometer.
Data Hold	Freeze the display reading.
Memory Recall	Maximum & Minimum value.
Sampling Time of Display	Approx. 1 second.


Data Output	RS 232/USB PC computer interface. * Connect the optional RS232 cable UPCB-02 will get the RS232 plug. * Connect the optional USB cable USB-01 will get the USB plug.
Operating Temperature	0 to 50 °C .
Operating Humidity	Less than 85% R.H.
Power Supply	* Alkaline or heavy duty DC 1.5 V battery (UM3, AA) x 6 PCs, or equivalent. * .DC 9V adapter input. (AC/DC power adapter is optional).
Power Current	Normal operation (w/o SD card save data and LCD Backlight is OFF) : Approx. DC 6.5 mA. When SD card save the data but and LCD Backlight is OFF) : Approx. DC 30 mA. * .If LCD backlight on, the power consumption will increase approx. 16 mA.
Weight	Meter 351 g. UVA probe 103 g.
	Meter 177 x 68 x 45 mm UVA probe 38 mm DIA. x 25 mm
Accessories Included	* Instruction manual.....1 PC * UVA light sensor.....1 PC * Hard carrying case, CA-06.....1 PC
Optional Accessories	SD Card (2 GB) Type K thermocouple probe. AC to DC 9V adapter. USB cable, USB-01. RS232 cable, UPCB-02. Data acquisition software, SW-U801-WIN. Excel data acquisition software, SW-E802.

ELECTRICAL SPECIFICATIONS (23±5 °C)

UVA Light

Measurement ranges & resolution	Range 1 : 2 mW/cm ² : 1.999 mW/cm ² x 0.001 mW/cm ² Range 2 : 20 mW/cm ² : 19.99 mW/cm ² x 0.01 mW/cm ²
Accuracy	± (4 % FS + 2 dgt). FS : full scale
	* UVA Calibration is executed under the UVA light & and compare with the standard UVA light meter.

UVA SENSOR SPECTRUM

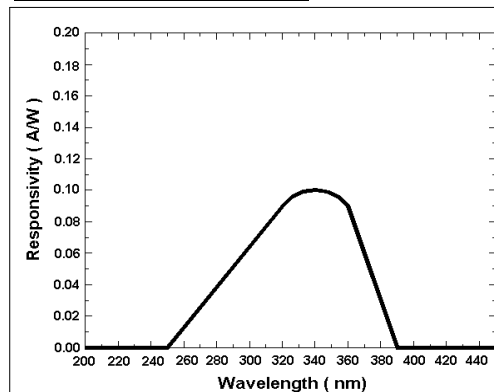

Type K/J thermometer

Sensor Type	Resolution	Range	Accuracy
Type K	0.1 °C	-50.0 to 1300.0 °C	± (0.4 % + 0.5 °C)
		-50.1 to -100.0 °C	± (0.4 % + 1 °C)
Type K	0.1 °F	-58.0 to 2372.0 °F	± (0.4 % + 1 °F)
		-58.1 to -148.0 °F	± (0.4 % + 1.8 °F)
Type J	0.1 °C	-50.0 to 1200.0 °C	± (0.4 % + 0.5 °C)
		-50.1 to -100.0 °C	± (0.4 % + 1 °C)
Type J	0.1 °F	-58.0 to 2192.0 °F	± (0.4 % + 1 °F)
		-58.1 to -148.0 °F	± (0.4 % + 1.8 °F)

PATENT	CHINA : ZL 2008 2 0189918.5 ZL 2008 2 0189917.0 Germany : Nr. 20 2008 016 337.4	JAPAN : 3151214	TAIWAN : M 358970 M 359043 U.S.A. : Pending
--------	--	-----------------	--

* Appearance and specifications listed in this brochure are subject to change without notice.

1109-UVA365SD